

FRONT DECAL INSTALLATION INSTRUCTIONS

©2009 3R1 Enterprises. All rights reserved.



NOTE: FD-001 is shown for illustration only. All front decals install in the same manner.

1: Determine where the decal is to be placed.

- A.** Trim the paper backing very close to the sides, top & bottom of the decal. **(Fig. 1)**


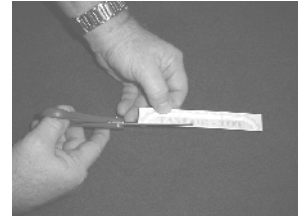


Fig.1

- B.** Measure to the center of the decal and make an alignment mark, at that point, on the top layer of the installation paper. (This will help you center the decal once the backing paper has been peeled off.)

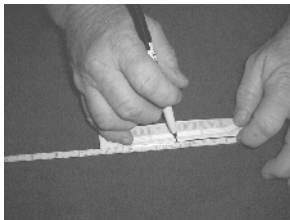

(Fig. 2)

Fig. 2

- C.** Measure to the front center of the stroller's shroud and make a small mark with a dry erase marker. This will be used to align the decal, left to right.

(Fig. 3 & Fig. 3a)



Fig.3



Fig. 3a

2: Make sure the front shroud is clean and free of dust.

3: Front decals have a paper backing on their back and a cloudy installation paper on their front. Both the decal and the installation paper have adhesive on their backs.

Gently peel the decal, and the cloudy installation paper, off of the backing paper, holding the decal carefully. **(Fig. 4)**

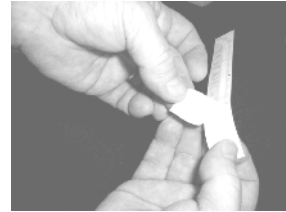


Fig. 4



4: Carefully place the decal against the shroud in the following manner.

A: Hold each end and align the two center marks that were made in step 1: B & C. This will position the decal properly, left to right. **(Fig. 5)**

Fig. 5

B: Slowly move each end of the decal around and against the shroud. If you can have someone assist you, this step will be easier because each of you can hold one end of the decal and one of you can press against the decal's center (moving outward) and eliminate any air bubbles. **(Fig. 6)**

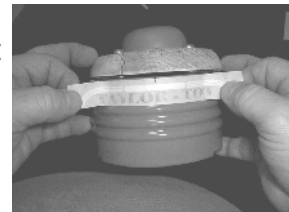


Fig. 6

C: Once the decal is firmly placed onto the shroud, gently peel the installation paper off the decal. **(Fig. 7)** Use a cloth over your finger to rub the decal's surface and squeeze out any air bubbles. Rub from the center of the decal outward to the nearest edge

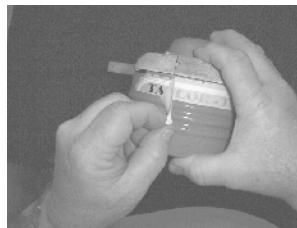


Fig. 7